



# Ugradna Vaga / Barkod

## Datalogic


Najpre treba podesiti COM Port na koji je vaga povezana. Otvori Device Manager, pronadji COM Port i podesi podesi parametre porta na sledeci nacin:

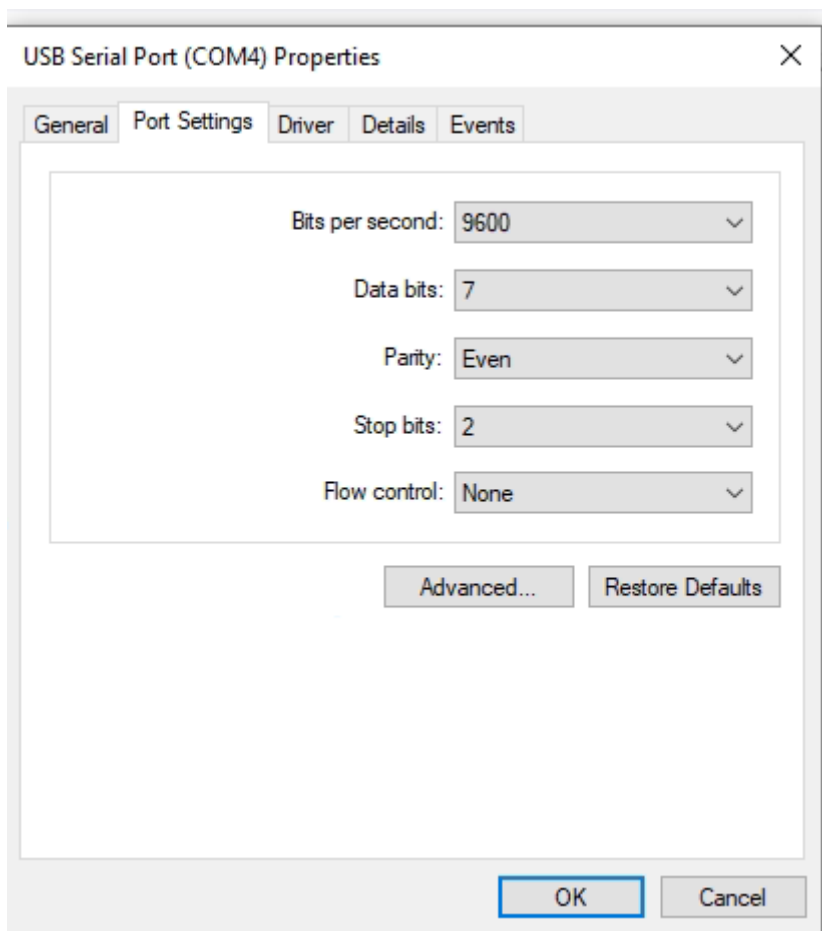

Nakon podesavanja COM Porta, otvori podesavanja Kontrol Vaga :

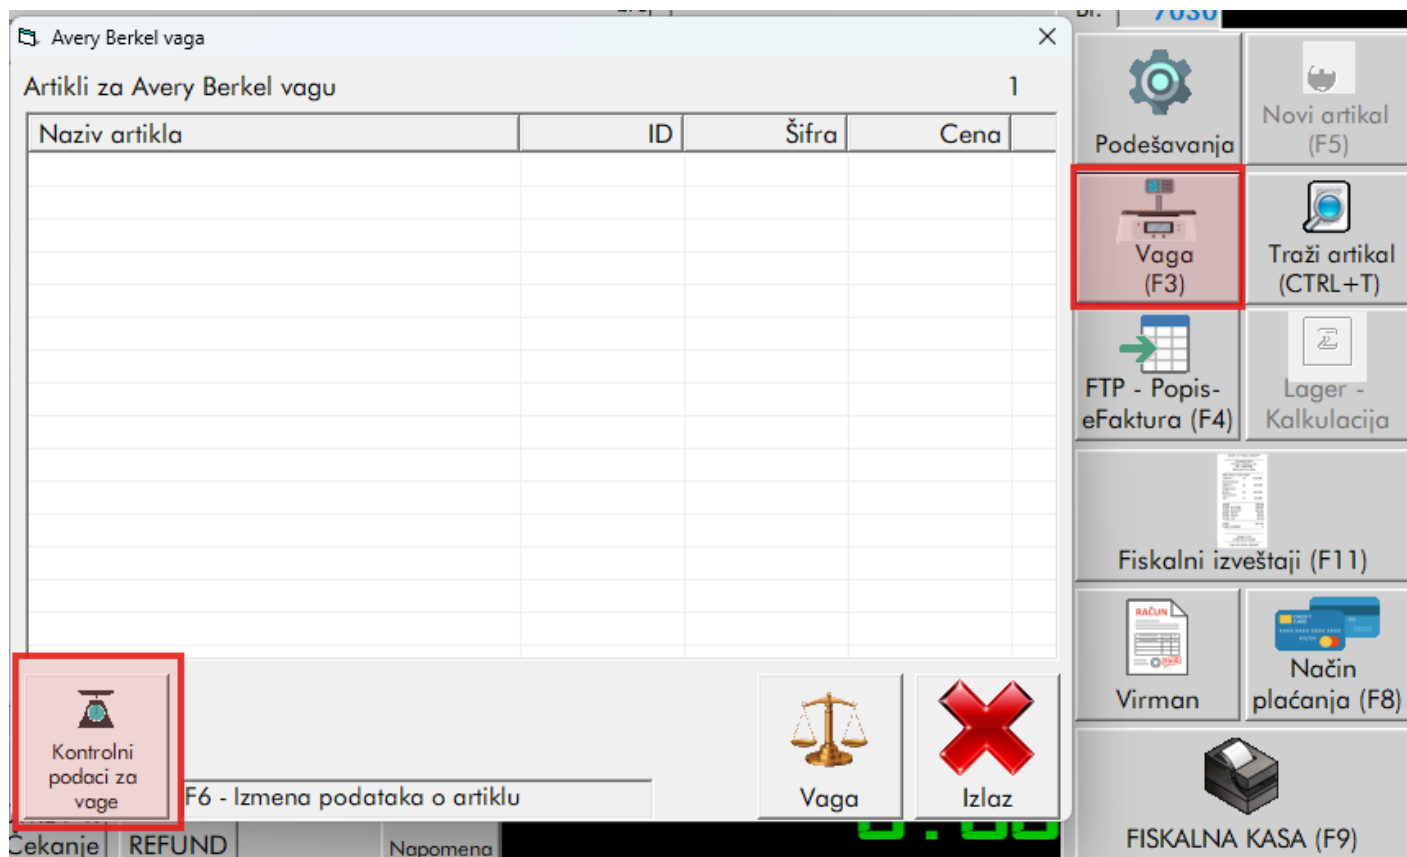

I podesi kontrolne parametre na sledeci nacin

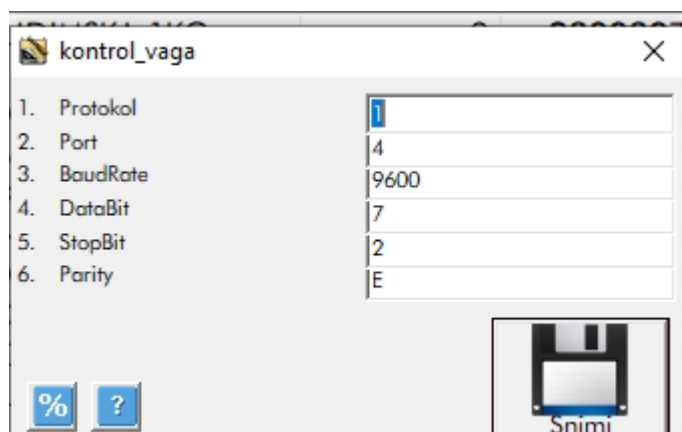

Revizija #6

Napravljeno 22 septembar 2025 09:36:46 od Ifet M

Ažurirano 22 septembar 2025 11:13:51 od Ifet M